



**C E Smith Co., Greensboro, NC**  
**cesmith.com**

# INSTRUCTIONS *for* **5' BUNKBOARD GUIDE-ONS**

- Bunkboard Guide-Ons are most helpful when fitted close to the boat and mounted as far to the rear of the trailer as possible.
- Height can be adjusted by mounting the uprights on top or underneath the frame.
- Swivel brackets and holes in the uprights provide adjustment to best fit the bunkboards to the shape of the boat.
- Uprights may be mounted with both uprights behind the fender, or they may be mounted straddling the fender as shown.




### Tools Required:

- 2 9/16" wrenches
- 1 #3 Phillips Screwdriver

### INSTRUCTIONS:

1. Select the best four upright mounting locations with no interference issues by resting an upright against the frame and moving it close to the side of the boat at all possible mounting locations.
2. Loosely assemble a bracket at each selected mounting location using one straight U-bolt and one formed U-bolt, washers and nuts.
3. Slide all four uprights into brackets, the end with holes up.
4. Continue tightening U-bolts until the uprights are loosely seated and level on the frame with the uprights standing about 4" from the boat.
5. Hold a bunkboard between the upright and the boat. Choose where the swivel brackets will be screwed to the bunkboard. Hold one in place, lay the bunkboard on the floor and screw the bracket to the bunkboard.
6. Return that bunkboard to the uprights. Position and hold the second swivel bracket. Then lay the bunkboard on the floor and screw it in.
7. Return the bunkboard to the uprights and bolt the swivel brackets to the uprights.
8. Adjust the fit and straighten the alignment, then fully tighten everything and pound the end plugs into the top of the uprights.
9. Repeat for the other side.

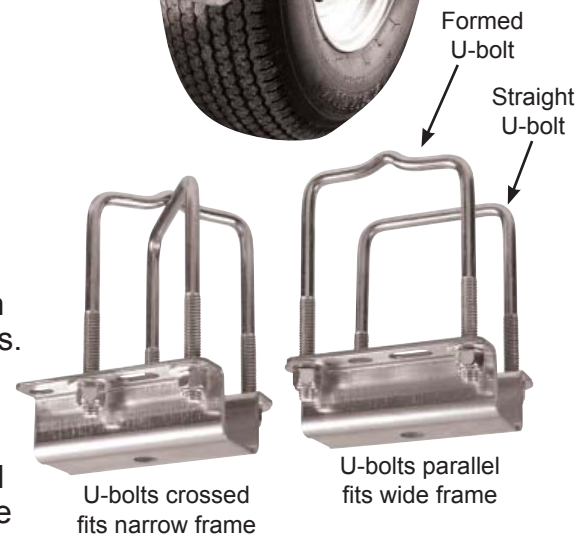

Fits frames up to 3" wide x 4-1/4" tall.

### REPLACEMENT PARTS:

p/n	Desc	Qty
27609PG	Upright	4
27821	Bunkboard	2
10201PG	Swivel Bracket	4
27603PG	Bracket	4
11332	End Plug	4
10810	Nut	20
10960	Washer	20
11005	Screw	8
11022	Bolt	4
15258	Straight U-bolt	4
15259	Formed U-bolt	4

Optional extra long U-bolt kit 11416 fits frames up to 5-1/4" tall.

p/n 00217 rev 8-2013



# INSTRUCTIONS

## 5' Les guides d'embarquement Guide-Ons

- Les guides d'embarquement Guide-Ons sont plus utiles quand ils sont ajustés près du bateau et monté le plus loin possible de l'arrière de la remorque.

- La hauteur peut être ajustée par les montants sur le côté ou sous le cadre de la remorque.

- Les supports pivotants avec trous des montants fournissent le meilleur ajustement possible des guides d'embarquement s'adaptant à la forme du bateau.

- Les montants peuvent être disposés par pair derrière les garde-boues, ou peuvent enfourcher les garde-boues comme démontré.



**OUTILS REQUIS :** Clé 9/16" et Tournevis Philips #3

### INSTRUCTIONS :

1- Sélectionnez les quatre meilleures localisations sans issues d'interférence pour pouvoir disposer les montants contre le cadre de la remorque afin que les possibilités qu'ils puissent s'adapter aux côtés du bateau soient accrues.

2- Assemblez un support à chaque endroit sélectionné. Utilisez un étrier fileté droit ainsi que d'un étrier fileté avec des rondelles et des écrous.  
3- Insérez les quatre montants dans les supports, les trous vers le haut.

4- Continuez de resserrer les étriers filetés jusqu'à ce que les montants atteignent 4" sur le côté du bateau et que le niveau du cadre atteigne 4" sous le bateau.

5- Tenir un guide d'embarquement entre le montant et le bateau. Choisir l'endroit où le support pivotant sera vissé au guide d'embarquement. En tenir en place, déposez le guide d'embarquement sur le sol et visser le support au guide.


6- Retournez ce guide d'embarquement vers les montants. Positionnez et tenez le second support pivotant et le visser aussi sur le guide.

7- Retournez le guide d'embarquement vers les montants et boulonnez le support pivotant au montant.

8- Ajustez et redressez l'alignement en serrant complètement chaque écrou et boulon. Mettre le bouchon d'extrémité sur le bout des montants.

9- Répétez pour l'autre côté.

Ensemble d'étrier en forme de "U" extra long (11416) pour cadre 5 1/4" et plus en option.

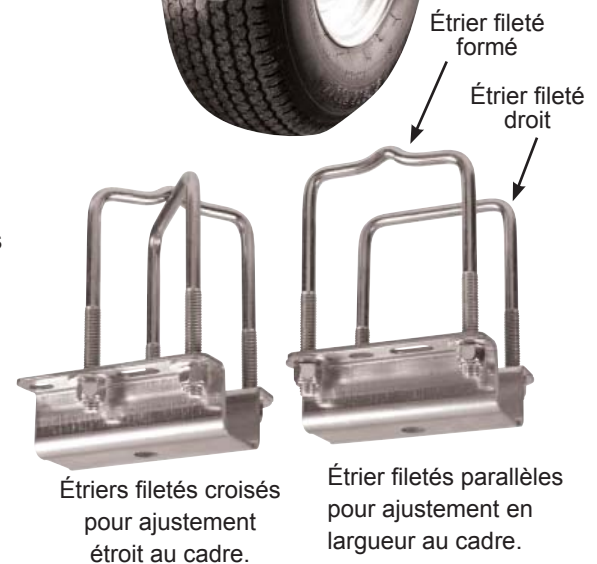

Pour cadres jusqu'à 3 "de large x 4-1/4" de hauteur.

### REPLACEMENT PIÈCES:

p/n	Desc	Qty
27609PG	Montant	4
27821	Guide d'embarquement	2
10201PG	Support pivotant	4
27603PG	Support	4
11332	Bouchon d'extrémité	4
10810	Écrou	20
10960	Rondelle	20
11005	Visser	8
11022	Boulon	4
15258	Étrier fileté droit	4
15259	Étrier fileté formé	4